### Key Lock with Kirk Key(Double) (AP Option, UVL/UVM Only)


The key lock keeps the safe from unexpected accidents by closing the breaker. When the key lock in on 'LOCK' position, it prevents the closing the circuit breaker both electrically and mechanically.

### 1. Installation

The LS provides key lock brackets and other parts only. Following the assembly instruction below.


### A. Assembling the kirk key with bracket.

**a**. Before starting assembly, make sure that the parts and its quantities are correct by comparing with the picture below.

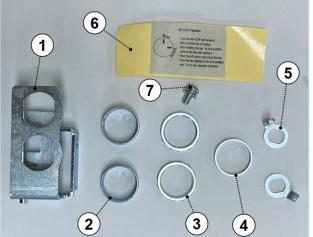


- ① Bracket Ass'y (1ea)
- 2 Cover (Thick, 2ea)
- ③ Nut (Slim 2ea)
- ④ Cover (Slim, 1ea)
- (5) Hook (2ea)
- ⑥ Sticker (1ea)
- ⑦ Screw (M4, 1ea)

<Picture 1 Parts of Single Kirk Key Frame >

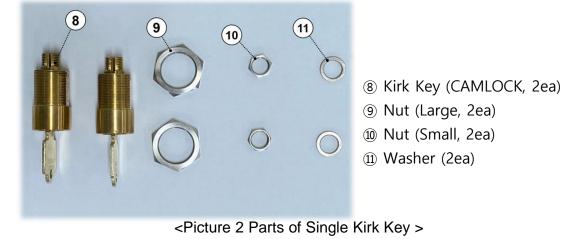

### Key Lock with Kirk Key(Single) (AP Option)

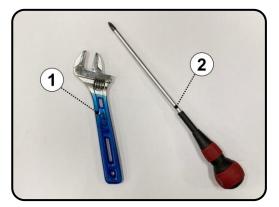


### <Picture 3 Required tools>

- ① Adjustable Spanner (1ea)
- Screw Driver(+) (1ea)



<Picture 4>

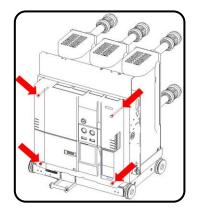



<Picture 5>

a. Unfastening the screw bolt by using screw driver.

There are 4 screw bolts which needs to unfasten.(See Picture 4) After unfastening, taking off the cover. (See Picture 5)

### Key Lock with Kirk Key(Single) (AP Option)



 b. Turning the both key to 90 degree clockwise.
The key and serial numbers which on key lock should be parallel. See Picture 6.





c. Insert the cover(2) to the both key lock.

<Picture 7>



d. Assembling the hook(5) as Picture 8. The bending part of hook should be pointed 1 o'clock direction. See Picture 8.

#### <Picture 8>




e. Applying a little of 'Loctite' to nut(10).Fastening hook(5) by using the nut(10).Fastening the nut(10) tightly.

## Key Lock with Kirk Key(Single) (AP Option)




<Picture 10>

f. Insert the key lock at the bottom of the bracket(1).During that the bending part of hook(5) still points 1 o'clock. See Picture 10.

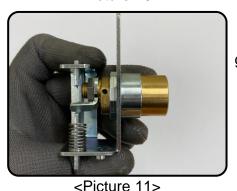

g. Applying a little of 'Loctite' to nut(3).Fastening the key lock and bracket(1) by using nut(3).If using nut(9), it will cause interruption when assembling another key lock.

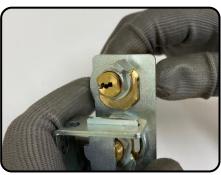

h. Insert the key lock at the top of the bracket(1).During that the bending part of hook(5) still points 1 o'clock. See Picture 12.







i. Insert the cover(4) first and then fastening the key lock and bracket(1) by using nut(3).Before the fastening, applying a little of 'Loctite' to nut(3).

<Picture 13>

### Key Lock with Kirk Key(Single) (AP Option)

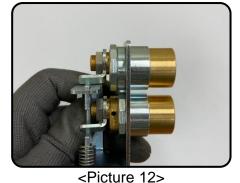

 h. Turning the key 90 degree counter clockwise.
Fastening the nut(3) tightly with pressing the bending part of hook(5).

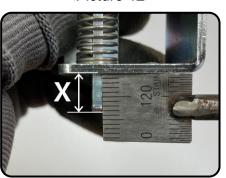

<Picture 13>

Removing the key and checking the dimension X.
When the key lock is 'LOCK', the dimension X is 7~9.5mm. When the key lock is 'UNLOCK', the dimension X is less than 1mm.

## Key Lock with Kirk Key(Single) (AP Option)

B. Assembling the key lock with the circuit breaker (UVL/UVM Type)




a. Insert screw bolt(4) to gap which on the key lock bracket.

<Picture 14>




 b. Insert the round tip on key lock to hole which on the top cover of the mechanism. Fastening the screw bolt loosely. The key lock should be 'UNLOCK' status.



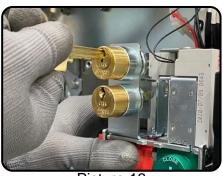


 c. Keep pushing the 'OPEN' button, then turning the key 90 degree counter clockwise for making 'LOCK' status. After that removing the key.



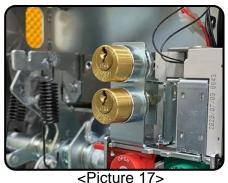

d. Fastening the screw bolt perfectly.

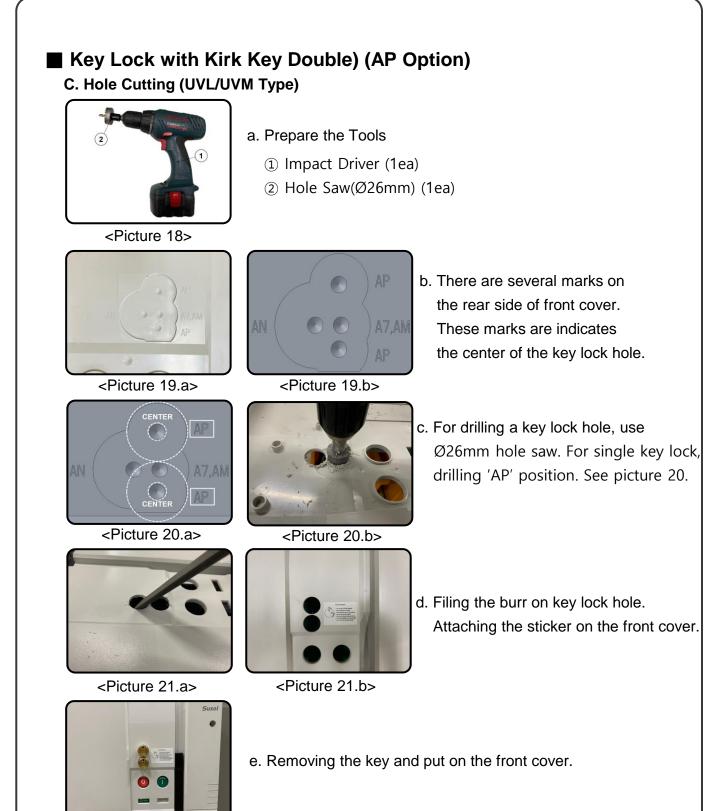

<Picture 22>